Havis, Inc.
75 Jacksonville Road, PO Box 2099
Warminster, PA 18974
T 800-524-9900 F 215-957-0729
www.havis.com

INSTALL INSTRUCTIONS C-TMW-GMC-02
HEAVY DUTY TUNNEL PLATE
2010-2013 CHEVROLET/GMC SUBURBAN/TAHOE, YUKON XL/YUKON, SILVERADO/SIERRA

TOOLS REQUIRED:

Ratchet wrench
Sockets- 7/16", 11 mm, 15 mm
Open End Wrench- 7/16"

HARDWARE:

QTY	DESCRIPTION	PART #
1	Front transmission hump bracket	C-B57
1	Rear transmission hump bracket	C-B58
1	28" x 8" Tunnel Plate	C-TMW-28E
2	Extrusion plastic end caps	CM002527A
8	¼" Flat Washers	GSM31005
8	¼" Lock Washers	GSM31026
8	¼" Serrated nut	GSM30023

Always!

- Read all instructions before installing any Havis, Inc. products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit.

C-TMW-GMC-02 Assembly

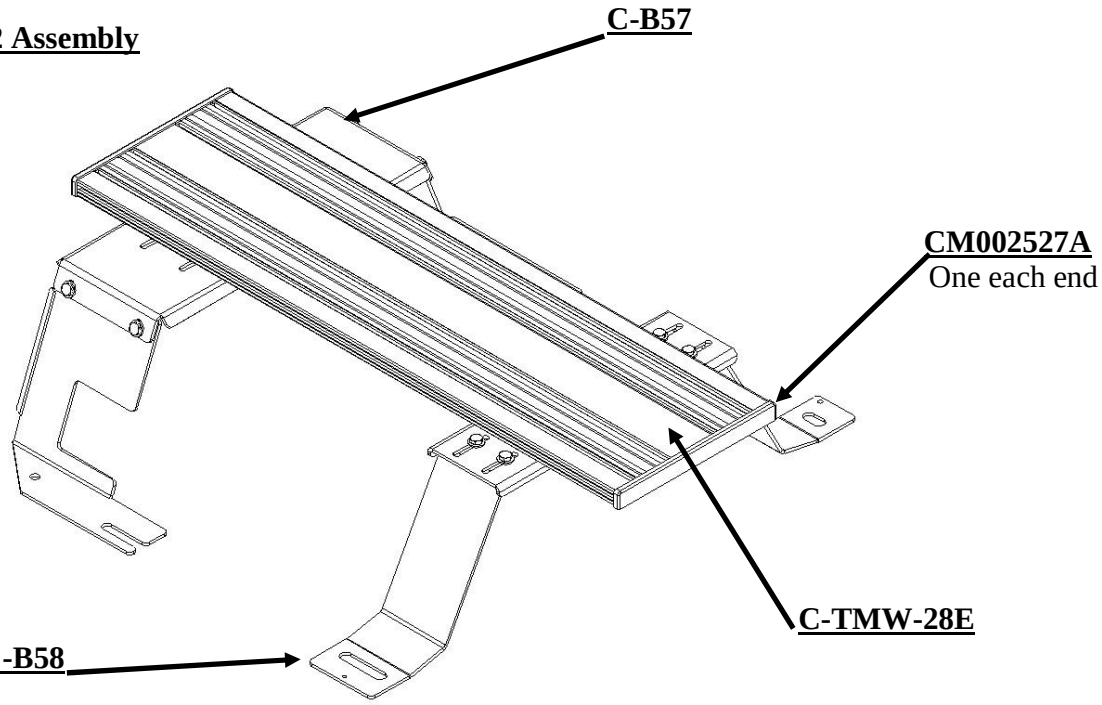

Remove OEM trim panel covering front inner seat bolts on driver and passenger sides.
Remove seat bolt nuts. (15 mm socket required.)

Slide seat forward and remove OEM trim panel covering rear inner seat bolts on driver and passenger sides.
Remove seat bolt studs. (11 mm socket required)

Loosely pre assemble front hump bracket with 1/4” x 3/4” bolts and flat washers, then position it under the OEM front seat brackets.

Loosely pre assemble rear hump bracket with 1/4” x 3/4” bolts and flat washers, then position it under the OEM rear seat brackets.

Determine the desired position of the Tunnel plate and mark location with a pencil on the hump brackets. Remove the front and rear hump bracket cross supports.

Insert 1/4” x 3/4” bolts into the bottom of Tunnel plate.
Line up Tunnel plate on cross supports where previously marked.
Use 1/4” serrated nuts to attach.
Reattach Tunnel with cross supports back onto seat brackets.